

WC1, WC2 & WC3 Installation & Maintenance Instructions

Please leave this instruction booklet with the home owner as it contains important guarantee, maintenance and safety information



WC1



WC2





WC3

















IMPORTANT

In the unlikely event of experiencing a problem with this product, please contact our helpline on 0844 98 000 97

Due to the nature of this product DO NOT attempt to return or remove this product from its installation.

Please read installation details carefully as they are intended to ensure this product provides long, trouble free service. Failure to install the unit in accordance with the installation instructions will lead to invalidation of the warranty.

CONTENTS

ecklist	4
ation	4
nnections	5
allation	6
ctrical Installation	10
mmissioning	
ntenance	12
hnical Specification	13
uble Shooting	16
arantee	17

PRODUCT DESCRIPTION

The **WC1**, **WC2** and **WC3** are slimline sanitary macerators for domestic use, designed for the drainage of fixed WC and requiring just 140 mm clearance between the WC spigot and bathroom wall.

WC₁



Designed to pump waste away from one WC.

WC2





Designed to pump waste away from one WC and one sanitary device.

WC3







Designed to pump waste away from one WC and two sanitary devices.

Please note the following warning signs.



Warning of possible electrical hazard.



Possible danger to personnel or important installation requirement.

APPLICATION




- All the safety & operating instructions in this booklet must be followed.
- The unit must not be used for any other application without the written consent of Stuart Turner Limited.
- The unit must be installed by a qualified person.
- The unit is not suitable for heavy commercial/industrial applications.
- The plumbing installation must comply with the Building Regulations.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- All pipework referred to in this installation manual are typical PVC waste pipe size's used in the UK.

STORAGE

If this product is not to be installed immediately on receipt, ensure that it is stored in a dry, frost and vibration free location in its original packaging.

ACCESSORIES CHECKLIST

IMPORTANT: With the product removed from its packaging check for any damage prior to installation. If any damage is found contact Stuart Turner Ltd within 24 hours of receipt.

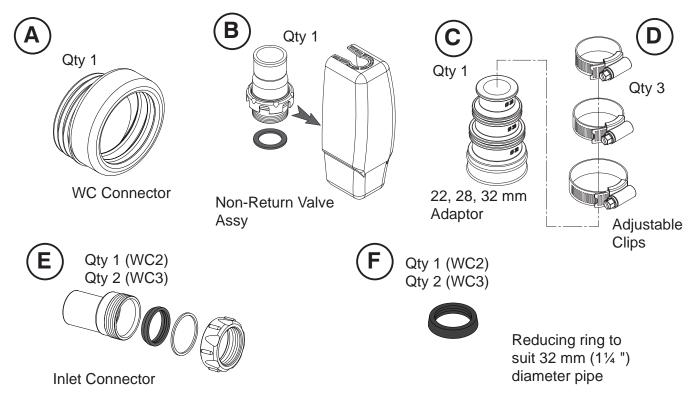


1 LOCATION

- 1.11 The unit must be connected directly to the outlet spigot of the WC pan. Allow a minimum height of 220 mm above the unit, for maintenance and servicing.
- 1.12 The unit must be positioned away from heat sources, such as radiators and heaters.
- 1.13 Care must be taken to protect the unit against frost and freezing. All pipes at risk of freezing must be protected by thermal insulation.
- 1.14 The unit must be located immediately behind the WC pan and **must not** be mounted behind a partition wall.

2 CONNECTIONS


Outlet - 22, 28 or 32 mm outside diameter piping using flexible adaptor

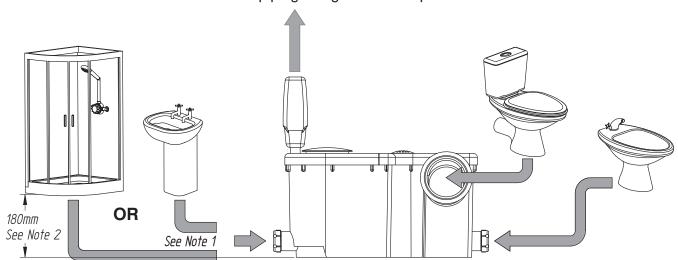


- 2.11 Note 1: Only connect one sanitary device per inlet connection.
- 2.12 Note 2: The shower tray (lowest waste outlet) must be a minimum of **180 mm** above the base of the macerator, to ensure necessary drainage **and must not contain a trap**.

3 INSTALLATION


INSTALLATION GUIDELINES

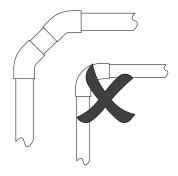


- 3.11 Always use smooth bends or 2 x 45° bends. **Do not use 90° elbows.**
- 3.12 You must install vertical pipework first. **Diagonal runs are not permitted**. Connection to the soil discharge pipe must be with a 45° inclined connection.

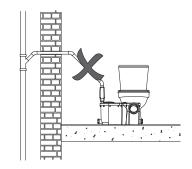


- 1.4 m
- 3.13 If the discharge is lower than the unit, to prevent water siphoning from the outlet pipe, an air admittance valve must be used (not supplied) capable of withstanding 6 psi, and fitted to a vertical vent pipe at least 1.4 m higher than the unit..
- 3.14 Unit must be placed directly behind the WC.

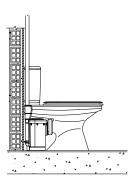

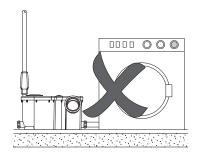

3.15 Do not connect to washing machines or dishwashers.

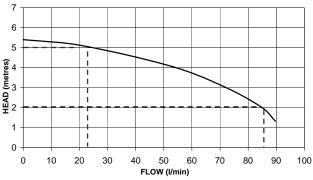


- 3.16 Ensure that the total flow drained at any given time never exceeds the total pumped flow from the unit, taking into account the height and length of the outlet pipe. For instance,
 - At 5 metres outlet head, the outlet flow is 23 l/min.
 - At 2 metres outlet head, the outlet flow is 85 l/min.



3.17 Always ensure full access to the unit is possible for maintenance.


STEP 1 WC CONNECTION

3.18 The unit is supplied with a WC pan connector (**A**), suitable for 102 mm WC outlet. Fit this connector into the unit, and rotate so that the connector is level with the WC outlet spigot.

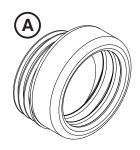


STEP 2 OUTLET CONNECTION


- 3.19 We recommend the use of 32 mm outlet pipework for minimising blockages, however 28 or 22 mm pipework can, as an alternative be used. Either pipework size: The horizontal outlet pipe must have a minimum fall of 1:100 (1°).
- 3.20 With 32 mm pipework fitted both WC1, WC2 and the WC3 will pump a maximum horizontal distance of 52 metres or a maximum vertical distance of 5 metres.
- 3.21 With 28 mm pipework fitted both WC1, WC2 and the WC3 will pump a maximum of 4 metres vertically using 22 mm dia. pipework, and then connect into a horizontal run of up to 42 metres in 32 mm dia. pipe.
- 3.22 With 22 mm pipework fitted both WC1, WC2 and the WC3 will pump a maximum of 3 metres vertically using 22 mm dia. pipework, and then connect into a horizontal run of up to 32 metres in 32 mm dia. pipe.

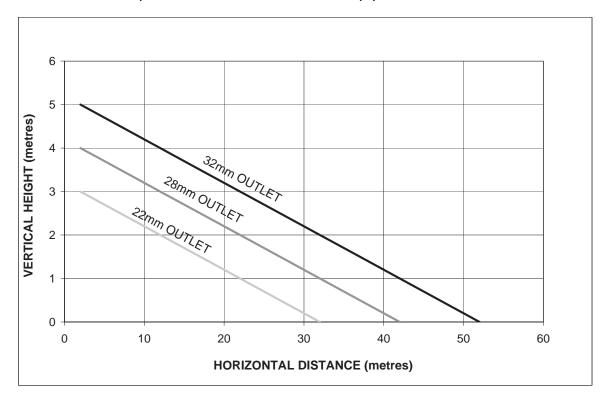

3.23 See diagram above for typical combinations of height and length of discharge when using 32 mm, 22 mm or 28 mm pipework. Do not exceed the guidelines given for pipe diameters.

- 3.24 The unit is supplied with a non-return valve (D) with cover (B) and a flexible rubber adaptor (C) for 22, 28 or 32 mm outside diameter pipe with adjustable clips (D).
- 3.25 The adaptor requires cutting to fit the selected pipe size (28 or 32) as shown in the diagram below.

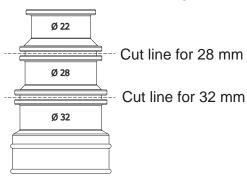





Fit the adaptor onto the top of the one-way valve with an adjustable clip.

The selected pipe can then be fitted down to the appropriate stops as shown.

Tighten the adjustable clips to 5.0 N.m

- 3.27 The non-return valve can then be fitted to the connector on the flexible pipe from the unit, ensuring that the rubber sealing washer is fitted, and it is tightened to produce a water tight seal.
- 3.28 The non-return valve cover has cut out sections for a good fit over the pipe used - remove the appropriate section and fit the over the one-way valve/adaptor assembly.

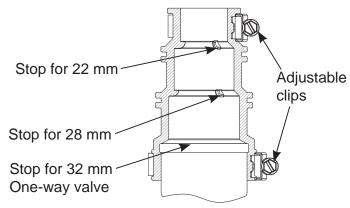

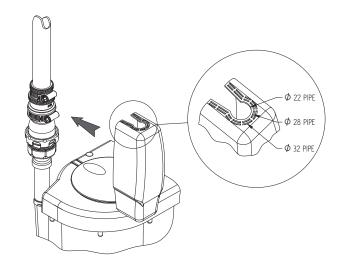




3.29 The flexible pipe must be supported by the fixing clip, along with all relevant fitted pipework to prevent the flexible pipe being bent which can cause an obstruction.

STEP 3 ADDITIONAL SANITARY CONNECTIONS


3.30 The unit is factory fitted with a cap, to seal the additional connections.

If the additional connection is to be used, unscrew the $1\frac{1}{2}$ " nut to remove the cap and seal.



- 3.31 The connection pipe must have a minimum fall of 1:33 (3°) into the unit.
- 3.32 This unit is supplied with an inlet connector (**E**), to allow connection to 40 mm (1½ ") diameter pipe.
- 3.33 Use the seal and nut with the inlet connector (**E**), to connect to your inlet pipe. Tighten to produce a watertight seal.

 All pipe connector nuts should be hand tight to seal.

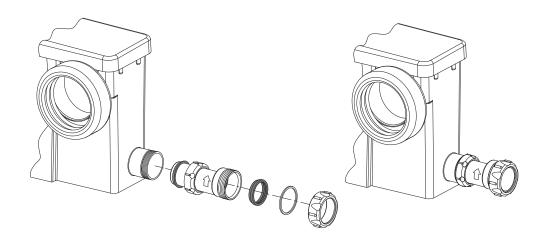

4 ELECTRICAL INSTALLATION



- 4.11 **Regulations:** The electrical installation must be carried out in accordance with the current national electrical regulations and installed by a qualified person.
- 4.12 **Safety:** In the interests of electrical safety a 30 mA. residual current device **(R.C.D. not supplied)** should be installed in the supply circuit. This may be part of a consumer unit or a separate unit.
- 4.13 Before starting work on the electrical installation ensure the power supply is isolated.
- 4.14 This appliance must be earthed.
- 4.15 The wiring must not be exposed to water.
- 4.16 The supply cable must be positioned so that it is not stepped on, cut or damaged.

4.17 Electrical Connection:

The unit is provided with a factory fitted supply cord. This must be permanently connected to the fixed wiring of the mains supply. Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

A suitable method of connection would be via a double pole switched, fused connection unit complying with BS 1363-4, protected with a fuse (see Section 7 - Technical Specification).

The connection unit should be mounted in an easily accessible position and should be labelled if confusion is possible, to allow easy identification of the macerator isolating switch.

4.18 Wiring Of Connection Unit:



WARNING: This appliance must be earthed.

The wires in the mains lead (supply cord) are coloured in accordance with the following code:

Green and Yellow: Earth Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your connection unit proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the connection unit which is marked with the letter E or by the earth symbol: \bigoplus or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

5 COMMISSIONING

- 5.11 The macerator will operate automatically as soon as the required level of water enters the case.
- 5.12 Check that the unit operates after the WC is flushed, using toilet paper, operate all the inlets one after the other. Finally check that all connections are watertight.
- 5.13 The unit should operate for no more than 10 to 20 seconds at a time, depending on the height and length of the discharge pipe, it is quite normal for the pump to cut in and out several times during the sanitary device emptying.

6 MAINTENANCE



- 6.11 The macerator should only be used for the removal of normal human waste, toilet paper and household WC cleaners.
- 6.12 AVOID COTTON WOOL, SANITARY TOWELS, TAMPONS, WET WIPES, PAPER TOWELS, CONDOMS, HAIR, FOOD WASTE, PLASTIC BAGS, NAPPIES, CIGARETTES ETC, as this will damage the unit.
- 6.13 Do not pour in any corrosive liquids such as acids, solvents, oil, paint stripper, as this will damage the unit, and is NOT covered under the guarantee.
- 6.14 Acid based descalents and aggressive cleaning agents must not come into contact with the unit.
 If in any doubt as to the suitability of the chemical solutions, please contact our Pump Assist Helpline.
- 6.15 As water is heated scale deposits are released in areas of hard water. Scale can cause the mechanical seal to stick if left unused for long periods. We recommend the unit to be run every four weeks to "exercise" all working parts.
 It is also recommended that a non acid based descalent is used to remove limescale. To be carried out twice a year.
- 6.16 There should be no dripping from the WC cistern or taps, as this will cause the unit to operate.
- 6.17 Do not use the toilet or connected sanitary device in the event of a power failure.
- 6.18 The adhesive warning label (Fig. 1), as provided is to be fixed in a visible area (suggest under toilet seat cover).




- 6.19 Should the unit start to release odours the charcoal filter should be changed (Fig. 2).
- 6.20 No other maintenance is required under normal working conditions.



WARNING: The macerator must be disconnected from the power supply before replacing the filter.

Contact Stuart Turner for spares replacement.

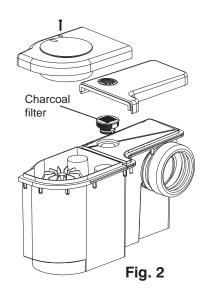


6.21 **For Further Technical Support:** Phone the Stuart Turner Pump Assist team on 0844 98 000 97. Our staff are trained to help and advise you over the phone or arrange for a service engineer to call.


7 TECHNICAL SPECIFICATION


Model		WC1	WC2	WC3
Electrical	Volts/Ph/Frequency	230/1/50	230/1/50	230/1/50
	Power consumed	500 Watts	500 Watts	500 Watts
	Full load current	2.2 Amps	2.2 Amps	2.2 Amps
	Rating	Continuous	Continuous	Continuous
	Max. No Starts per hour	60	60	60
	Enclosure	IPX4	IPX4	IPX4
	Fuse Size	5 Amps	5 Amps	5 Amps
Mechanical	Max flow	90 litres/min	90 litres/min	90 litres/min
	Max head (closed valve)	5.4 metres	5.4 metres	5.4 metres
	Max liquid temperature	50 °C	50 °C	50 °C
	Min liquid temperature	4 °C	4 °C	4 °C
	Max ambient air temperature	40 °C	40 °C	40 °C
	Max noise level	60 dB	60 dB	60 dB
ons	Length	482 mm	482 mm	482 mm
	Width	180 mm	180 mm	180 mm
Dimensions	Width behind pan	180 mm	180 mm	132 mm
Dim	Height (excluding flexible hoses)	278 mm	278 mm	278 mm
	Weight (including accessories)	7.85 Kg	7.95 Kg	8.00 Kg
Connections	Clearance behind WC spigot	184 mm	184 mm	140 mm
	WC	102 mm Dia.	102 mm Dia.	102 mm Dia.
	Inlet(s)	N/A	40 mm (1½ ") Dia.	40 mm (1½ ") Dia.
Con	Outlet	32 mm (1¼ ") Dia.	32 mm (1¼ ") Dia.	32 mm (1¼ ") Dia.
	Connecting cable	1.5 metres	1.5 metres	1.5 metres

Stuart Turner reserve the right to amend the specification in line with its policy of continuous development of its products.

WC₁

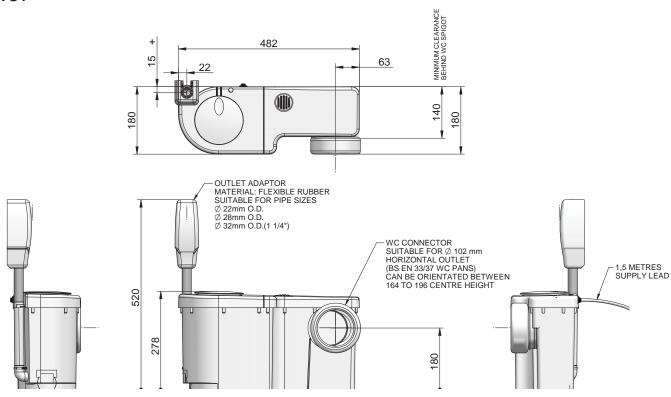

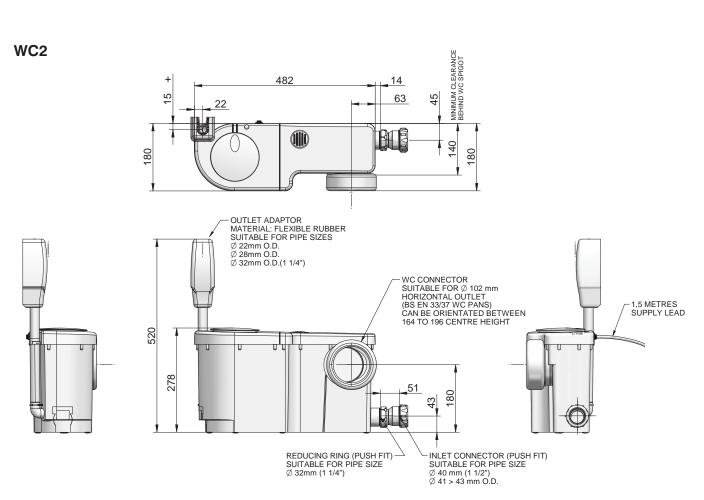

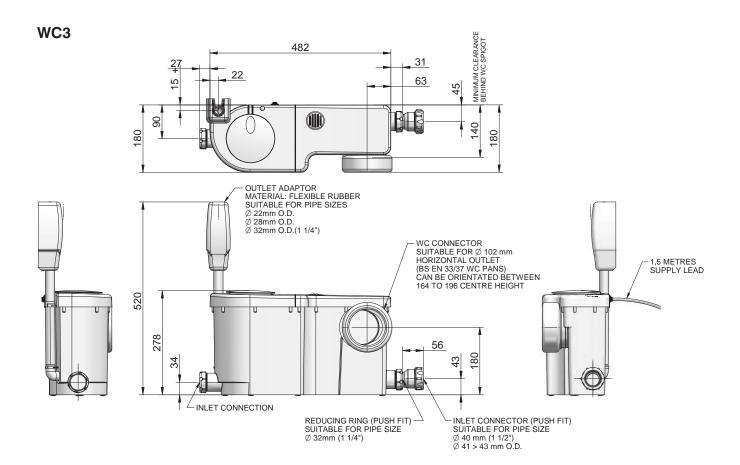

8 TROUBLE SHOOTING GUIDE



8.11 WARNING: The macerator must be disconnected from the power supply before any service.



8.12 All work involving dismantling the macerator, except for the service of the filter and inlet/outlet non-return valves, must be carried out by an approved engineer. Contact Stuart Turner Ltd for details of approved service engineers.

Symptoms	Probable Cause	Recommended Action
Macerator will not start.	Electrical supply.	Check wiring connections. Check all switches are 'on'. Check fuse (see technical specification section). Check circuit breaker is set.
	Motor thermotrip activated.	Wait approximately 20 minutes for the thermotrip to autoreset.
Macerator works, but does not discharge, or discharges slowly.	The outlet pipe is blocked.	Clean the outlet pipe.
The motor buzzes, but does not spin.	Pump is blocked.	Do not attempt to service the macerator. Contact Stuart Turner Ltd.
After use, the macerator hunts on and off.	The outlet non-return valve is leaking or there is water loss from the WC or auxiliary sanitary connections.	Clean the non-return valve. Fix the leaks from the WC or auxiliary connections.
The macerator does not stop.	The outlet pipe is too high or too long. The outlet pipework is restricted. The internal pressure switch has failed.	Correct installation. Clean the outlet pipe. Pressure switch in need of replacement contact Stuart Turnel Ltd.
The macerator works with the WC, but not with the auxiliary sanitary connections.	The inlet pipework or inlet non-return valve is blocked.	Clean the inlet pipe or non-return valve.
Accumulation of waste inside WC, after flushing.	Inadequate water volume in cistern.	Adjust water level in cistern (minimum 6 litres).
Water returns to the shower tray.	The minimum fall for the inlet pipe has not been met. The inlet non-return valve is blocked.	Correct installation. Clean the non-return valve.
Odd noises when the macerator operates.	Obstruction due to foreign object.	Do not attempt to service the macerator. Contact Stuart Turner Ltd.
Nasty smells from the macerator.	Active carbon filter need replacing. Pipework is obstructed.	Replace the filter.

8.13 **Environment Protection:** Your appliance contains valuable materials which can be recovered or recycled.

At the end of the products' useful life, please leave it at an appropriate local civic waste collection point.

9 THE WASTEFLO GUARANTEE

Congratulations on purchasing a Stuart Turner macerator.

We are confident this macerator will provide many years of trouble free service as all our products are manufactured to the very highest standard.

All Wasteflo macerators are guaranteed to be free from defects in materials or workmanship for 2 years from the date of purchase.

Within the guarantee period we will repair, free of charge, any defects in the macerator resulting from faults in material or workmanship, repairing or exchanging the whole unit as we may reasonably decide.

Not covered by this guarantee: Damage arising from improper use, unauthorised repair, normal wear and tear and defects which have a negligible effect on the value or operation of the macerator.

Reasonable evidence must be supplied that the product has been purchased within the guarantee term prior to the date of claim (such as proof of purchase or the macerator serial number).

This guarantee is in addition to your statutory rights as a consumer. If you are in any doubt as to these rights, please contact your local Trading Standards Department.

Guarantee Call Out Procedure

In the event of a claim, **DO NOT remove or try to return the unit**, please telephone '**Pump Assist**'.

0844 98 000 97

Have the following information ready before you call 'Pump Assist'.

- Proof of purchase
- Serial number of product

Full details will be given when contacting 'Pump Assist'.

You should obtain appropriate insurance cover for any loss or damage which is not covered by Stuart Turner Ltd in this provision.

Please record here for your records.

TYPE NO.	SERIAL NO.	DATE PURCHASED

NOTES

NOTES



DECLARATION OF CONFORMITY

2006/42/EC

BS EN ISO 12100-1, BS EN ISO 12100-2

2006/95/EC

BS EN 12050-3, BS EN 12050-4, BS EN 60335-1

2004/108/EC

BS EN 55014-1, BS EN 61000-3-2, BS EN 61000-3-3,

1999/519/EC BS EN 62233

2011/65/EU

IT IS HEREBY CERTIFIED THAT THE SANITARY MACERATOR AS SERIAL NUMBER BELOW, COMPLIES WITH THE ESSENTIAL REQUIREMENTS OF THE ABOVE E.E.C. DIRECTIVES.

RESPONSIBLE PERSON AND MANUFACTURER

STUART TURNER LIMITED HENLEY-ON-THAMES, OXFORDSHIRE RG9 2AD ENGLAND.

Signed...... Business Development Director

Stuart Turner are an approved company to BS EN ISO 9001:2000



Stuart Turner Ltd, Henley-on-Thames, Oxfordshire RG9 2AD ENGLAND Tel: +44 (0) 1491 572655, Fax: +44 (0) 1491 573704

email: pumps@stuart-turner.co.uk web: www.stuart-turner.co.uk V.A.T. REG. No. 199 0987 92. Registered in England No. 88368. Registered Office: Market Place, Henley-on-Thames